

Installation Kit For Part #'s

F3624/636, F36288, F3624T/636T, F4624B/636B, F4624TB/636TB, F5624B/636B, F75624B/636B

Do not smoke or be near open flame while performing installation. Wear eye protection as the fuel system is under pressure.

Kit Includes

Installation bracket, cable ties, and the fuel line disconnect tool EFI multi port fuel injection hose with Male/Female rail quick connect fittings

Installation Procedure

- Unscrew the filler cap to release residual pressure in the fuel system.
- Screw the 90* fittings into the top and bottom of the Fitch unit. Tighten down the lock nut on the 90* fittings.
- Using the provided male and female hoses, screw the opposite end of the male and female quick connects onto the 90* fittings according to the factory male and female quick connect fittings.
- Locate a secure mounting location. Typical mounting locations are the master brake cylinder stud, firewall, inside fender, or along the frame. Slide over the supplied mounting clamp and tighten it down.
- Run both hoses form the Fitch unit to the factory quick connect fittings. These fittings are
 typically located on top of the engine in the front or back near the firewall, on the side of the
 engine block, under the vehicle by fuel filter, or on the fuel rail.
- Disconnect the fuel supply line male/female quick connect fitting. (Use white plastic disconnect tool provided in kit when applicable)
- Install the factory female quick connect fitting by sliding it onto our Fitch male quick connect
 until it bottoms out. Connect the Fitch female quick connect over the factory male, and push
 the locking tab over. Snap in the secondary locking clip on the Fitch female.
- Disconnect both the battery leads and touch together for at least 30 seconds. If vehicle is
 equipped with 2 batteries disconnect all 4 leads, and than touch one set at a time together.
 Now reconnect both lead sets to both batteries. This will ensure the computer memory is
 reset.
- Turn the key to the "on" (not crank) position, wait 10 seconds, turn the key off and repeat 4 5 times. This is to prime the fuel system.
- Double check all connections for leaks, and also make sure fuel lines do not come in contact
 with any of the exhaust, intake, or cooling system components. Priming/Bleeding the
 system may be needed but varies with every installation to ensure the removal of any
 air in the fuel line.
- Start vehicle and hold steadily at 1500 rpm for 60 seconds. This is to cycle fuel through the system, eliminating any air in the system.

Manufacturer's Warranty

The Fitch[®] Fuel Catalyst products have a ninety (90) day money back guarantee provided the installation instructions were followed correctly and the return of the product is based either on product defect or dissatisfaction with the product's performance. The Fitch Fuel Catalyst device is guaranteed to be free from defects in material and workmanship for a period of 250,000 miles (defined by EPA in 40 CFR 85.117), or 5,000 operating hours from the date of installation. The manufacturer warrants that the installation of Fitch Fuel Catalyst product on a vehicle will not cause the emissions noncompliance of the engine on which it is installed for the life of the catalyst from the date of installation

OTHER THAN THE WARRANTIES HEREIN CONTAINED, THERE IS NO OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) THAT SHALL EXIST IN CONNECTION WITH THE SALE OR USE OF ANY FITCH FUEL CATALYST PRODUCT. The Manufacturer assumes no liability for faulty or improper application of its products or resulting from collision or abuse. All claims under the Manufacturer's warranty must be made during the applicable warranty period and the product claimed defective or non-conforming returned by Buyer. Return the defective device along with dated proof of purchase to the distributor from which the device was purchased so that the distributor may handle your warranty claim in an expeditious manner. Manufacturer will repair, or at its option, replace any defective or non-conforming product and return the repaired or replacement product without charge.

SUCH REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY (WHETHER UNDER THE THEORIES OF BREACH OF CONTRACT OR WARRANTY, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY) AVAILABLE FROM MANUFACTURER AND MANUFACTURER IS NOT RESPONSIBLE FOR DAMAGES OF ANY KIND, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OF THIS CONTRACT.

Manufacturer's warranties shall not be enlarged, diminished or affected by, and no obligation or liability shall arise or grow out of Manufacturer's rendering of technical advice or in service in connection with an order or the goods furnished. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied or deemed conditions or warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.











THESE ARE EXAMPLES OF INSTALLATIONS - PHOTOS MAY NOT BE OF YOUR SPECIFIC VEHICLE

IMPORTANT NOTES

For any questions please call APSI toll free at <u>1-888-881-2774</u>. Any variations from these instructions should also be pre-approved by APSI. After installation is complete, (if convenient) drive the vehicle over 50 miles per hour for a minimum of 20 minutes with at least 2 start and stop procedures.