


8. Perform the 'INSPECTION AFTER TRANSMISSION INSTALLATION', and verify that there is no malfunction.

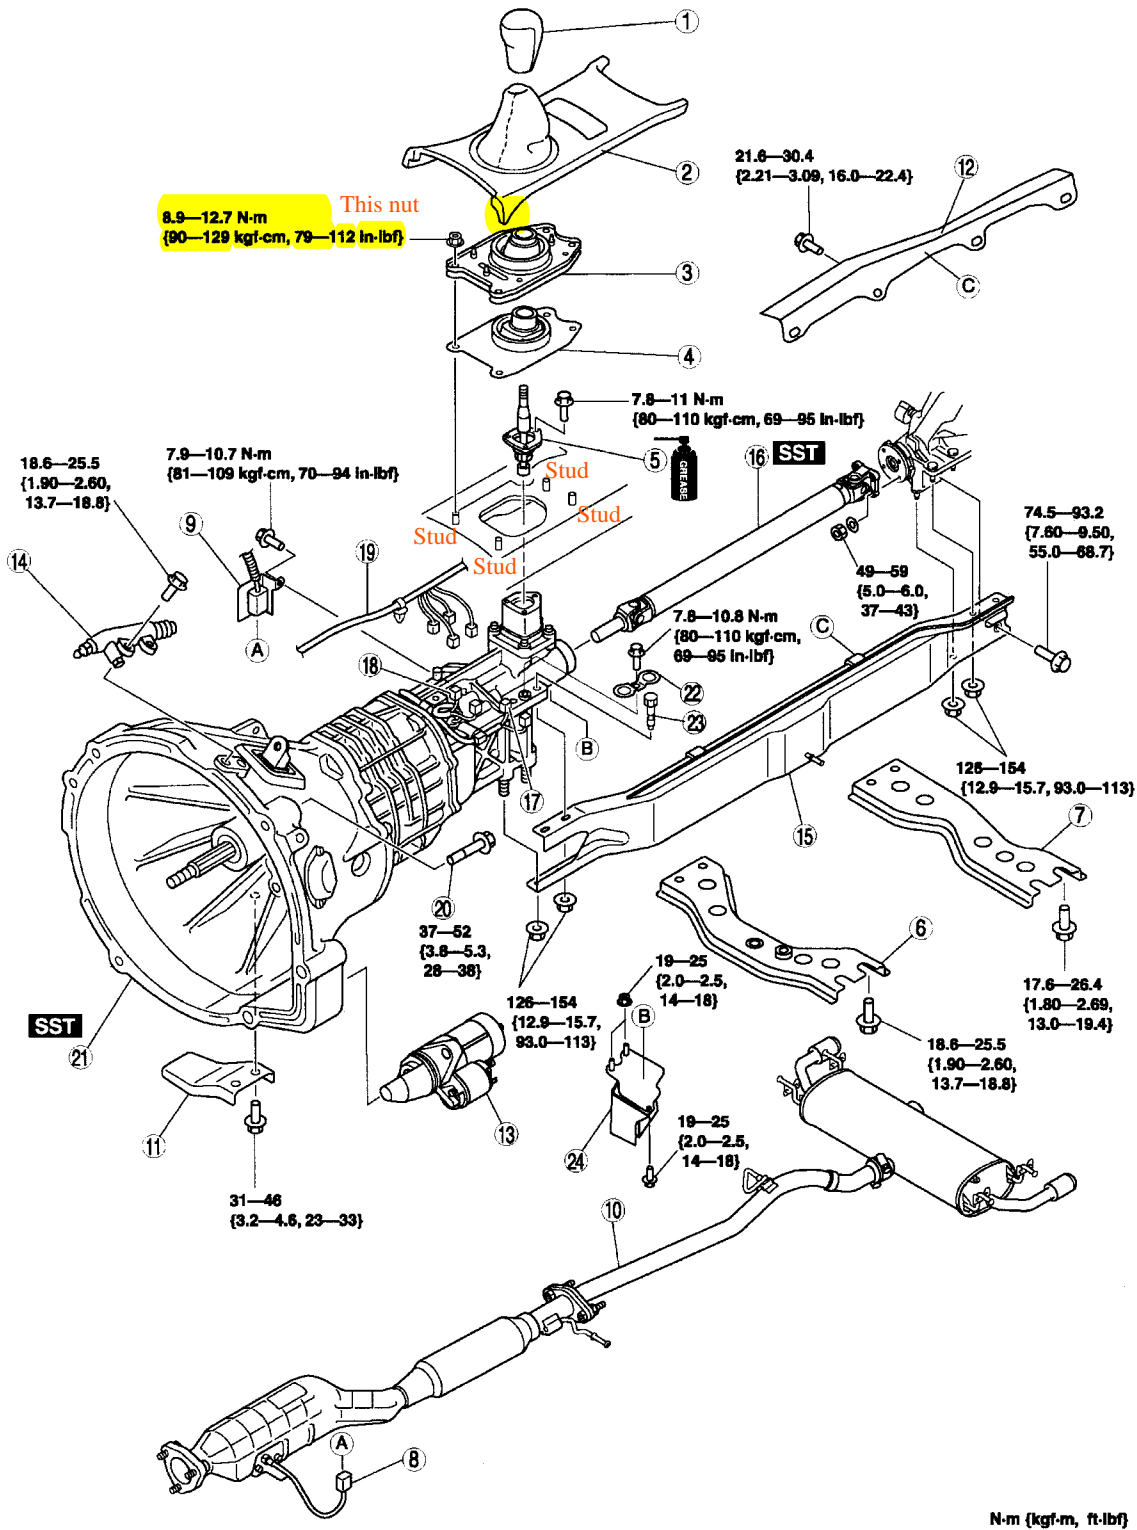


1	Shift lever knob
2	Upper panel

3	Shift insulator component (outer)
4	Shift insulator component (inner)
5	Shift lever component
6	Front tunnel member
7	Rear tunnel member
8	Heated oxygen sensor connector
9	Heated oxygen sensor connector bracket
10	Catalytic converter, middle pipe, main silencer
11	Exhaust manifold stay
12	Heat insulator
13	Starter
14	Clutch release cylinder
15	Power plant frame
16	Propeller shaft
17	Back-up light switch connector
18	Neutral switch connector
19	Wire
20	Transmission installation bolt
21	Transmission
22	Stopper
23	Bolt
24	Dynamic damper

### Exhaust Manifold Stay Removal Note

1. Remove the exhaust manifold stay from the transmission.
2. Rotate the exhaust manifold stay and place it on the transverse member.

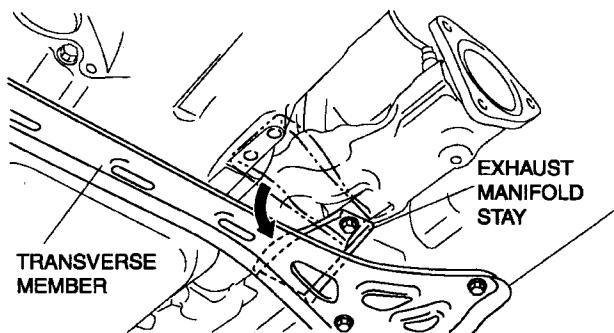

### Power Plant Frame Removal Note

1. Support the transmission using a transmission jack.