

2. Remove the engine cover.

3. Remove the oil filler cap.

4. Remove the oil pan drain plug, and drain the engine oil.

5. Install the oil pan drain plug with a new washer.

**Oil pan drain plug tightening torque**

- o 29.4—39.2 N·m {3.00—3.99 kgf·m, 21.7—28.9 ft·lbf}

**NOTE:**

- The amount of residual oil in the engine can vary according to the replacement method, oil temperature, etc. Verify the oil level after engine oil replacement.

6. Refill the engine with the type and amount of engine oil specified in the table. Recommended oil

Item	Recommended oil
------	-----------------

(w) Engine Specifications  
Page 31

API service	SL
SAE viscosity	5W-20
ILSAC	GF-3

Oil capacity (Approx. quantity)

L (US qt, Imp qt)

Item	Oil capacity (Approx. quantity)
Oil replacement	3.3 {3.5, 2.9}
Oil and oil filter replacement	3.5 {3.7, 3.1}
Engine overhaul	4.7 {5.0, 4.1}
Total (dry engine)	Standard power: 5.8 {6.1, 5.1}
	High power: 6.7 {7.1, 5.9}

7. Install the oil filler cap.

8. Start the engine and confirm that there is no oil leakage.

- If there is any oil leakage, find the cause and repair or replace the applicable part.