


ROBIN YANG

[Home](#) / [Modify Cars](#) / Cabin Air Filter

The following information is intended as procedural reference only and may or may not match the requirements of your vehicle. Use at your own risk and always observe proper safety precautions. This DIY is copyrighted by Robin Yang. Permission is given to redistribute the contents without alteration provided you cite the original author and provide a link back to the original page.

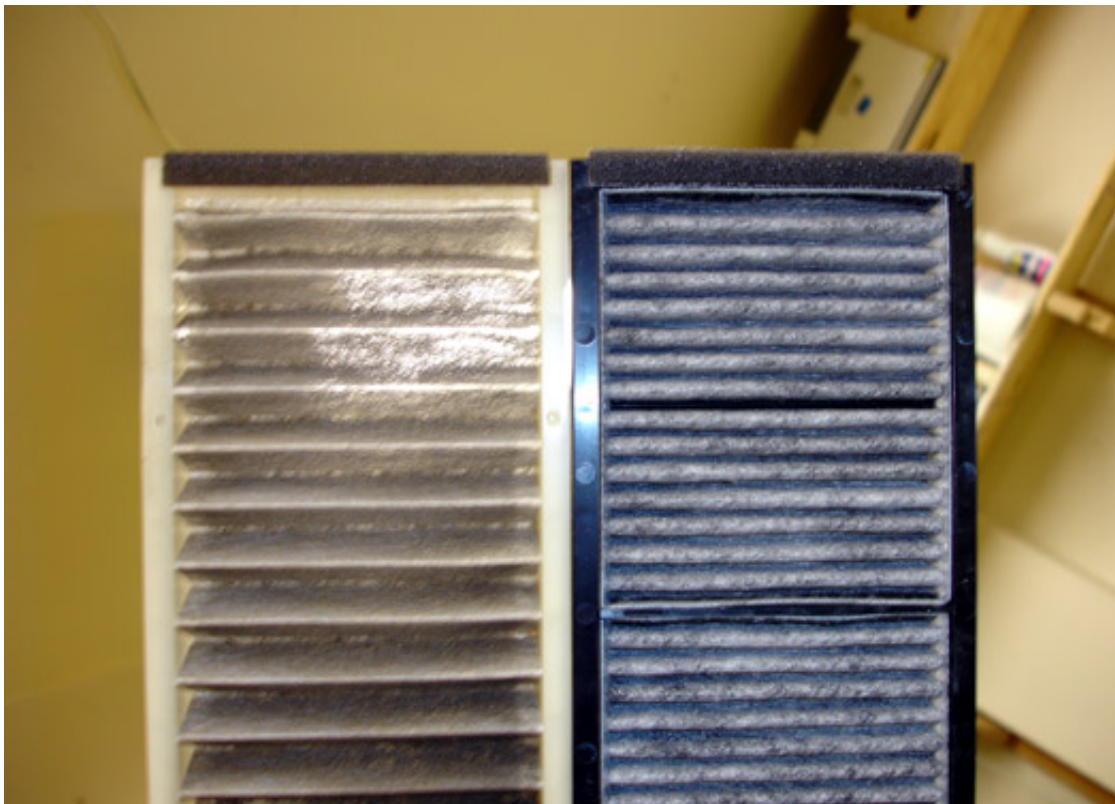

As you can see the stock cabin air filter on the left is pretty flimsy. That isn't a camera flash reflection--it's the light behind the filter shining through. By contrast the aldehyde filter on the right is much thicker. The part number is LDY3-61-J6X.




Step 1: Open the glove box. Squeeze the sides of the glove box together so the ears on each side (Circle A) clear the retaining stop.

Step 2: Pull the connecting rod to the




right until the snap
(Circle B) pops out.

Step 3: Lift the glove
box out and set aside.

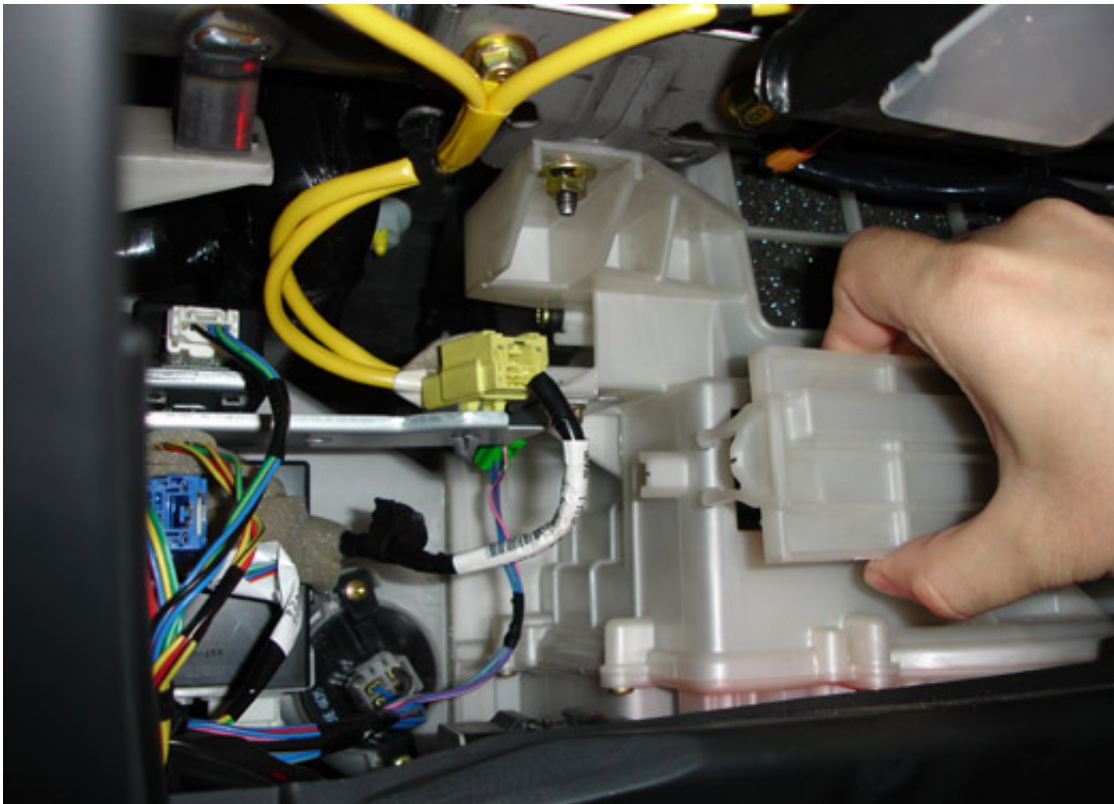

Step 4: Pull the air
box cover straight
back. It has retaining
clips on either side.

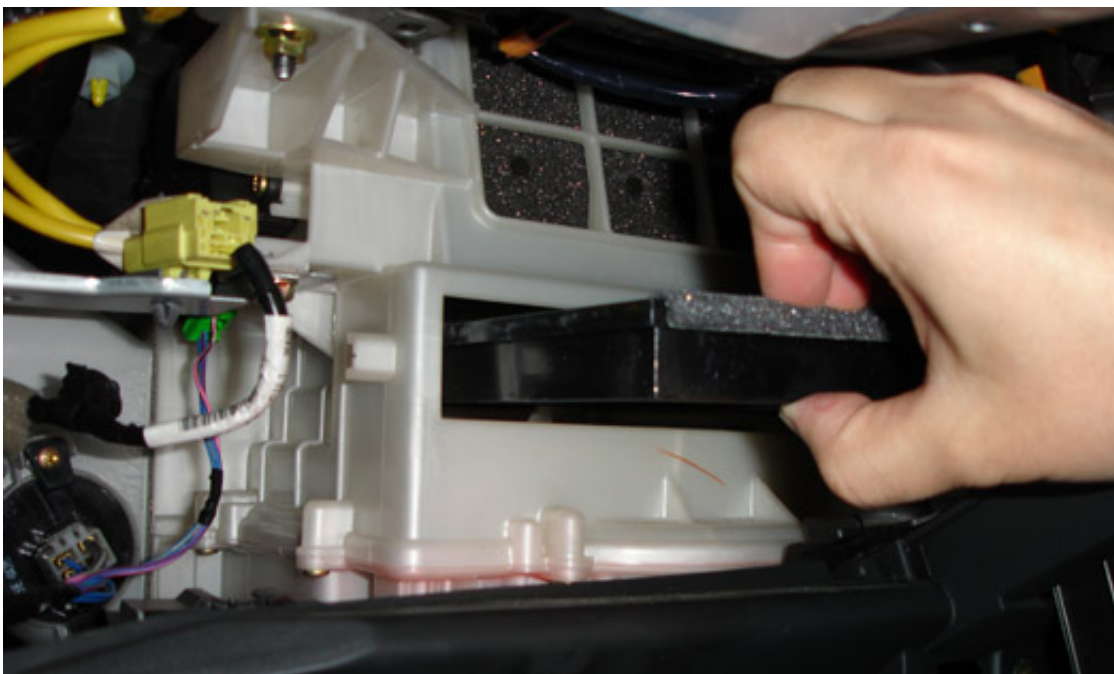

Step 5: Remove the
two air filters from the
compartment.

Step 6: Reassemble
the parts in reverse
order. You're done!